

Blade Saver Hockey Stick Blade Protector User Manual

To make sure you have the best experience possible with your new Blade Saver(s), please keep the following points in mind:

The easiest way to fit the Blade Saver to the stick blade is as follows:

1. Push one end onto the bottom of the blade, near the toe of the blade
2. Gradually work the rest of the Blade Saver down the blade toward the shaft
3. If necessary, slide it slightly one way or the other so that it fully spans the bottom of the blade where it contacts the ground

Properly fitting the Blade Saver may take some force since it is meant to fit snugly!

Per the product description, it's best to wrap some hockey tape around each end of the Blade Saver to ensure it stays secure while playing. A couple wraps around each end should be enough.

It's good practice to re-tape the Blade Saver before each use, and even during use, since the tape on the bottom can wear down quickly.