

# Outdoor Guardian Compact High Back Folding Chair

Thanks for your purchase! Below are the instructions for how to assemble and disassemble your new chair. Please read them carefully before first assembling the chair.

## Assembly

1. Remove the frame, fabric cover, pillow, and anti-slip feet from the carry bag:



2. Assemble the frame:



Unwrap the frame from the fabric cover



Pull the frame to the sides



Pull the T-handle outward to lock the base in place

Unwrap the Velcro straps to release the poles on both sides and insert them into the plastic holders.

Make sure the poles are fully inserted into the holders and connect the back poles until they are fully extended.



3. Put the fabric cover onto the frame:




Turn the bend of the back poles inward to minimize the distance between them. Place the reinforced fabric inserts over one back pole and then the other. You will need to pull the fabric while pushing the last pole toward it. This is normal.



Insert the reinforced front fabric inserts over each of the front poles. Again, you will need to pull the fabric over the pole to apply the appropriate amount of tension. After sitting a few times, the fabric will stretch and attachment will become easier.



4. Add pillow, anti-slip feet, and adjust leg height as necessary to complete assembly:

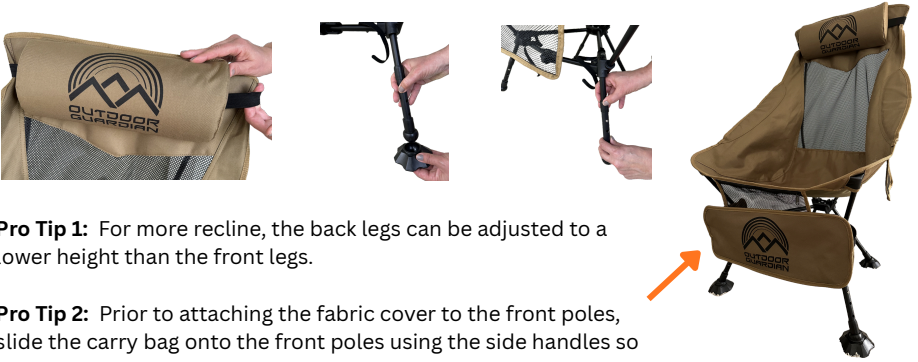

**Pro Tip 1:** For more recline, the back legs can be adjusted to a lower height than the front legs.

**Pro Tip 2:** Prior to attaching the fabric cover to the front poles, slide the carry bag onto the front poles using the side handles so it won't be lost. It can also be used for extra storage.

## Disassembly

1. Remove the anti-slip feet, pillow, and fabric cover from the frame:



2. Disassemble the frame:



Wrap the poles on each side with Velcro straps



Push the T-handle inward



Push the frame inward

3. Place the frame, pillow, anti-sink feet, and fabric cover back in carry bag:



Wrap the fabric cover around the frame



Stuff everything into the carry bag

Assembly and disassembly should be quick after practicing a few times.

**IMPORTANT NOTE:** Avoid leaving the fabric attached to the chair for many consecutive days, as this can bend the back poles inward over time and cause the fabric cover to become loose.

We strive to provide our customers with high quality products. If you encounter any issues with your chair, please contact us at [support@outdoorguardian.net](mailto:support@outdoorguardian.net).

